




ASUS ZenPad S 8.0 Battery Replacement

How to take apart your device and replace battery inside.

Written By: Samantha Brown

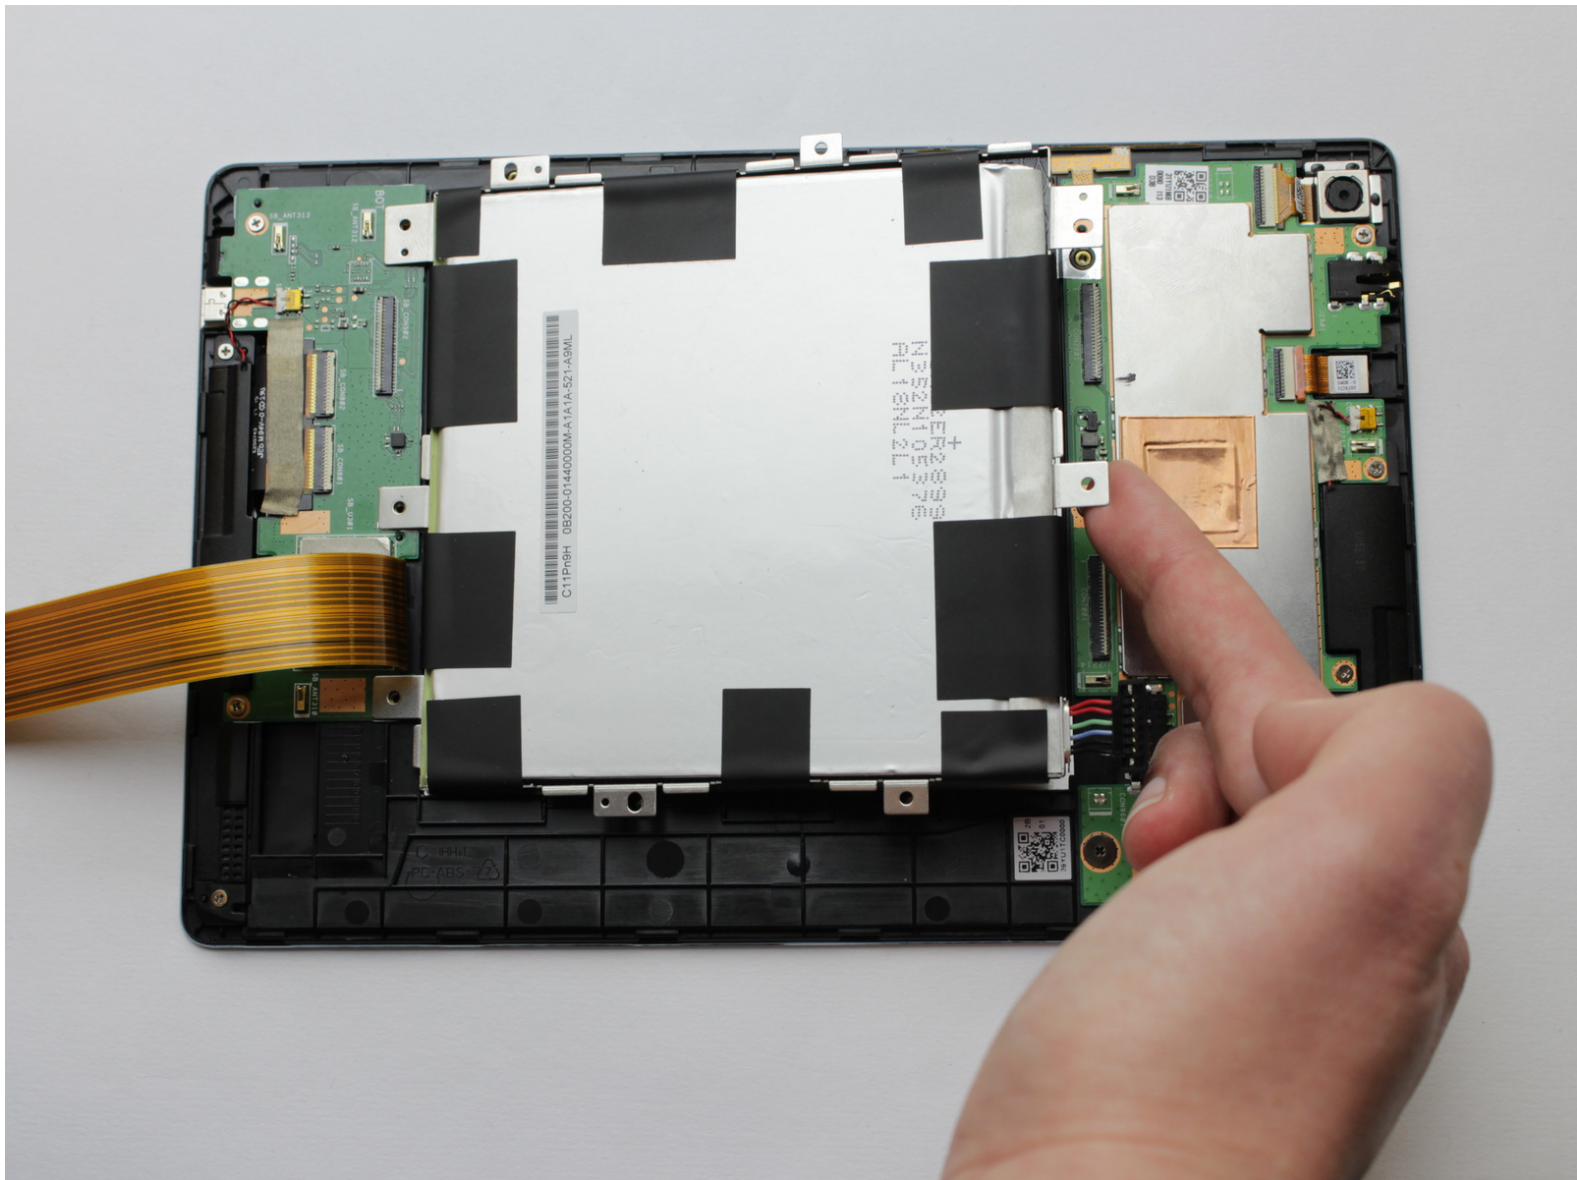

INTRODUCTION


If your battery is not holding a charge, you can use this guide to replace it. Before beginning to replace the battery in this device, there are a few precautions to consider. One of those precautions would be to ground yourself to prevent frying the internal components. Another precaution would be to label and organize your small parts and screws to avoid misplacing important components. Happy fixing!



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery

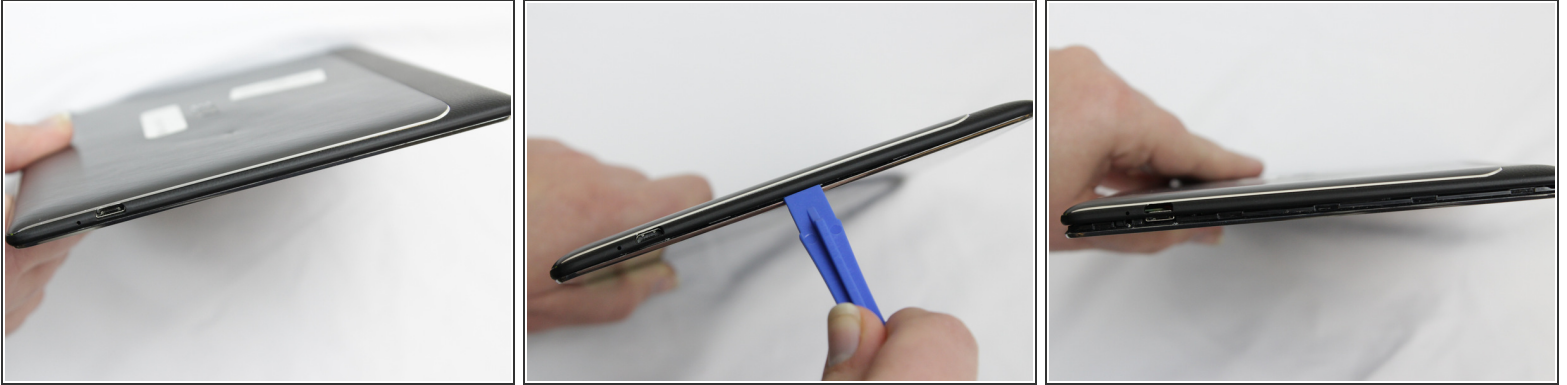

- Use the plastic tool to pry between the silver bezel and the back case
- Work the tool around the device to free the back case

Step 2

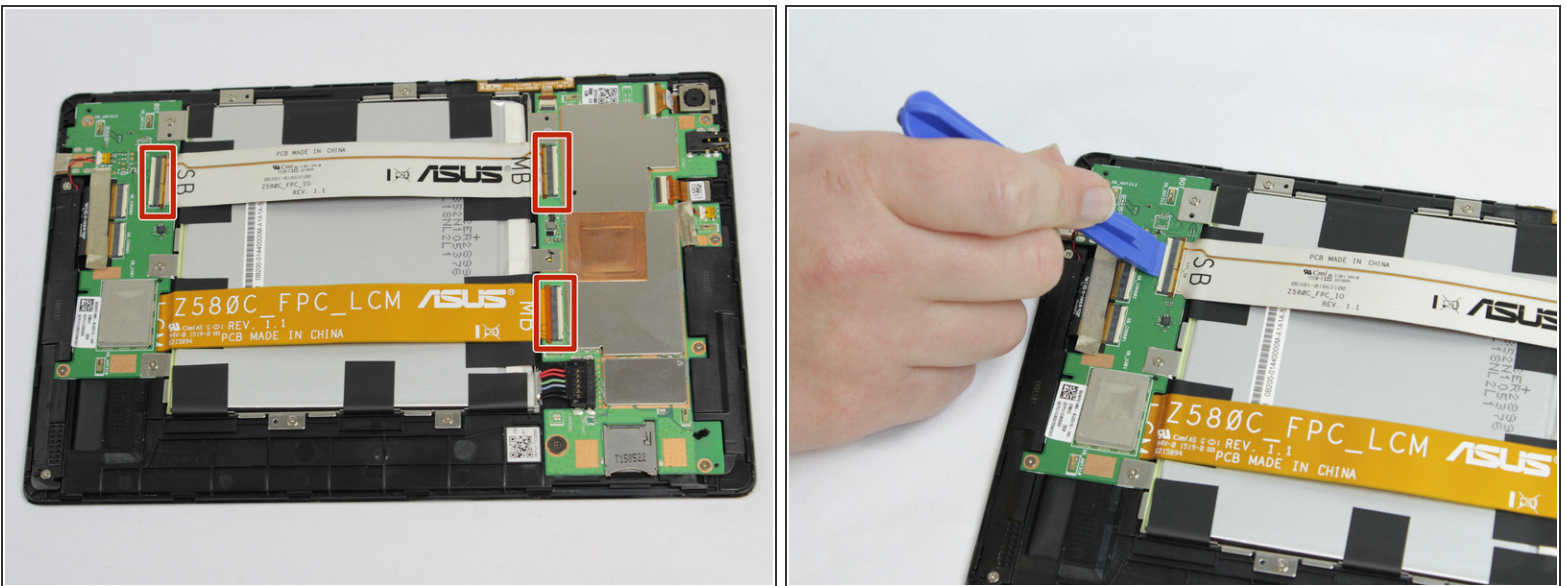


- Remove the ribbon cables by lifting up the white retaining flap on the ZIF connectors, then pulling the ribbon cable away.




Do not kink the ribbon cables as they can break easily

Step 3

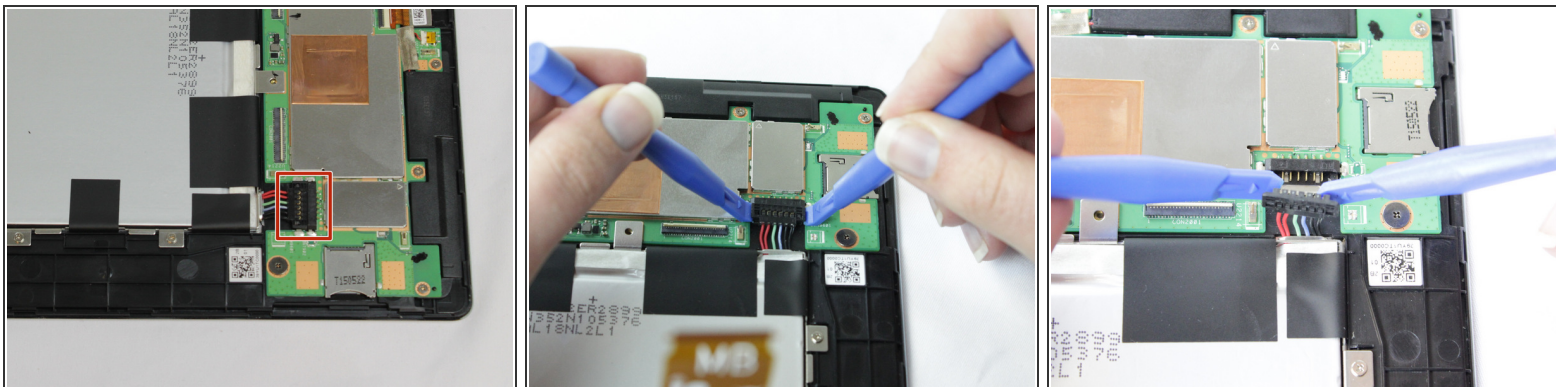

- Remove the battery connector by prying it up away from the device using 2 plastic pry tools

Step 4

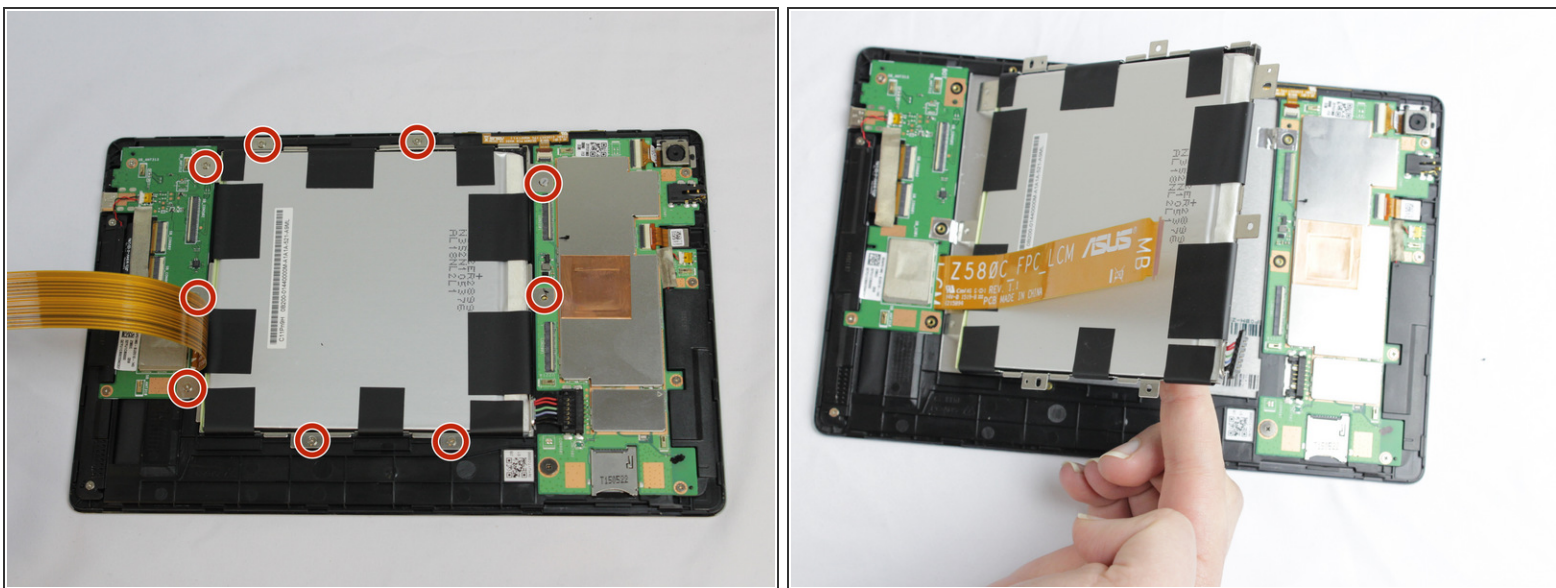

- Remove all 9 of the 1.5mm #00 Philips screws
- Gently lift the battery out of the device

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-27 01:34:38 PM.